

ANBEA®

3C 認證高級指紋保險箱(JFF 系列)

首次開機 (任何手指)

先把手指按 指紋位置，大約二秒，會有成功提示音，最後轉動鎖匙或旋轉把手拉開保險箱。

更改指紋 (指紋容量 29 枚)

加入第一枚指紋：先按一下綠色按鈕 (在放電池的右方)，把第一隻手指放上指紋位，聽到一聲長響，更改完成。

加入第二或更多枚指紋：先按一下綠色按鈕 (在放電池的右方)，把第一隻手指放上指紋位，聽到一聲響聲，再把新的指紋放上指紋位，聽到一聲長響，登記完成。

(請先再試一次指紋是否正確才把保險箱門門上)

震動警報

先按一下黑色按鈕 (在放電池的右方)，聽到“嘀”一聲是關閉震動警報。聽到“嘀答嘀”就是開啟震動警報



(建議貴客在出遠門或長時間不在家才開啟警報)

還完出廠設定

長按紅色按鈕 (在放電池的右方)，聽到一聲長音，還完出廠設定完成。

內門密碼 (出廠密碼 “000”)

更換密碼時需要先撥到正確密碼 (圖 1)，把 A 轉到 B (圖 2)，再在密碼盤上撥到你想要的密碼，完成後再撥回 A 上，密碼更換成功。

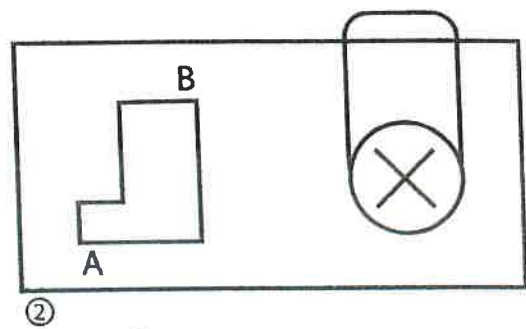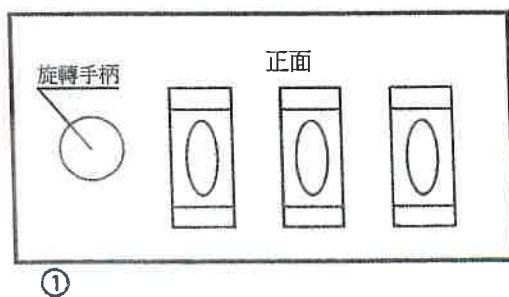

請妥善保管你的後備電源盒和後備鎖匙，不能放進保險箱內。電池應當最少每半年更換一次，防止電池結晶出水引致電腦板短路。

本保險箱有兩年免費保養，但不包括人為問題，電池結晶出水引致電腦板短路等等。

JFF Series User Manual

Using for the First Time (Any Finger)

First, put a fingerprint (Any Finger) on the window about 2 seconds, the buzzer sounds, then turn the key or handle to open the door.

Change Fingerprint Password (maximum 29 different fingerprints)

Add the first fingerprint: Press the green button (at the battery box right side), put your finger on the window, the buzzer sounds long beeps, the fingerprint accepted.

Add the second or more fingerprints: Press the green button (at the battery box right side), put your finger (the first fingerprint) on the window, the buzzer sounds, then put the new fingerprint on the window, the buzzer sounds one long beeps, the fingerprint accepted.

(Please do not close the door before you make sure the fingerprint already accepted)

Vibration Alarm Setting

First, press the black button(at the battery box right side), if the buzzer sounds once beep, the vibration alarm turn "Off"; the buzzer sounds thrice beeps the vibration alarm turn "On".

Factory Reset

Press and hold the red button (at the battery box right side) about 2 seconds, the buzzer sounds long beeps, factory reset accepted.

Setting Inside Door's Password

First enter the correct password, then turn the handle bar, now change the password combination, then turn back the handle bar to apply the new password setting.