
Advanced Digital Lock

INSTRUCTION



EDL88


R3

Global Quality Certificates




User Guide

EDL88

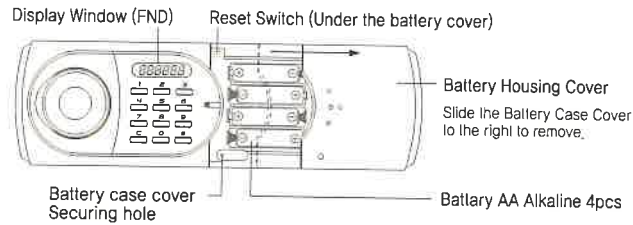

R3

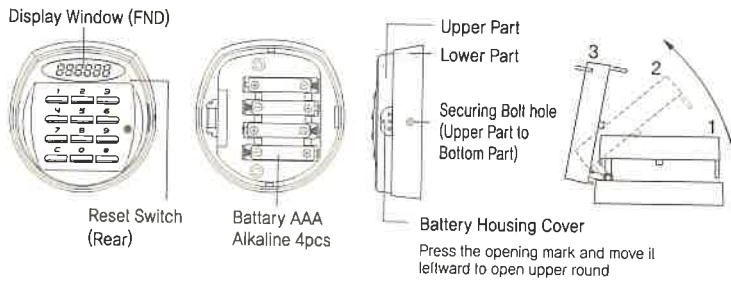

1 How to open?

- Step 1. Press 'C' button
- Step 2. Press factory code '1 2 3 4 5 6'
- Step 3. Press '#' button (Melodic tone, OPEnd on FND)
- Step 4. Turn knob (Key or Handle) clockwise and open the door while melody rings.



1. In case of wrong code tried, it sounds Bi-Bi-Bi. (Err0r on FND)
2. In case of wrong codes tried over five times, the lock gets paralysed (dELAY on FND), for 5 minutes ringing alarm. The lock automatically gets normal in 5 minutes.

2 How to lock?

1. Home Safe (EN,EK) : Close the door, turn knob (or key) counter-clockwise.
 2. Office Safe (EH) : Close the door, then it is locked automatically.
 3. Office Safe (EHK) : Close the door, and turn the key counter-clockwise by 360° and take it out.
- If you want to use digital lock only in EHK, turn the key clockwise by 360° and take it out.

3 How to enter user code? : Door open

* Please decide your 6 digits code.

Step 1. Press ' M ' button on Backside of door

Step 2. Press your Code

Step 3. Press ' # ' button (Melodic tone, EntErd on FND)

EX) If a new code is decided 4 5 0 8 1 5, press buttons M 4 5 0 8 1 5 # consecutively (Melodic tone)



! To confirm if the user code is exactly entered, please check it prior to closing door.
In case of your code 2 1 1 2 2 5, press button C 2 1 1 2 2 5 # consecutively.
If the procedure properly done, melody rings 3 seconds.

4 Dual Control : Two different codes required.

* For dual control, 2nd user code must be entered.



* To set dual control, press following buttons.



* How to open door under dual control?



* To unset dual control, press following buttons.



! When Dual Control unsets, the 2nd code is automatically removed.

5 When to replace batteries?

1. When " C " button pressed, low battery warning (LObAtt on FND with Bbiric Bbiric)
2. Door may not open in spite of exact code entered in case of battery low.

• Battery Life Span : 1 year (openings 3 times a day)
EDL88 : 1.5V AA Alkaline 4pcs / R3 : 1.5V AAA Alkaline 4pcs

• In spite of the batteries completely exhausted, the code is preserved in safe condition.

6 Code hidden & No Sound

To set on **M** → **7** → **#** (hdE on FND)

To set off **M** → **7** → **#**

7 Scramble Numbers

Behind and/or before the user code, scramble numbers allowed.
The last 6 digits only exist on FND.

8 Alarm setting

- ① Once Alarm System is affected by shock, Vibration or Tilt, it makes horn immediately.
- ② Alarm set is automatically released when door is opened.
- ③ If necessary, alarm should be reset whenever door is opened.

To set on **M** → **B** → **#** (ALERt on FND)

To set off **C** → **User Code** → **#**

9 Reset Function

Reset switch on PCB

ANBEA®

EDL 系列使用說明書

- * 先向上拉開面板，裝入4粒2A電池。
- * 如何打開保險箱？
先按C鍵 → 輸入123456 → 再按# 鍵，顯示屏就會顯示出OPEnd，順時針轉動手柄或鎖匙就可以將門打開。（如錯誤輸入密碼會顯示出ErrOr）
- * 如連續輸入5次錯誤密碼，密碼系統會立刻停止操作，顯示屏顯示出dELAY，必須等候顯示熄滅後，才可以重新使用。
- * 如何設定個人密碼？ 本系列有兩組個人密碼。
第一組設定：先將門在打開狀態下，按門後板上的M鍵，再在面板上輸入4到16位數字密碼，再按# 鍵，顯示屏出現EntErd已成功輸入密碼。
例如：密碼設定為8888。按M → 8888 → # 即可。
- * 隱藏數字和靜音
按 M → 7 → # 即可。
如需取消請重覆以上便可。
- * 警報設置
當設置完成後，任何搖盪，震動或傾斜都會發出警號。
按 M → 8 → # 即可。
如需取消按 C → 正確密碼 → # 便可。
- * 電池的使用壽命一般為一年，更換電池後，密碼記錄會保持不變。