

**附送配件** 當您打開產品包裝箱時，請務必清點以下附件是否齊全！



門鎖鑰匙



後備匙



外接電源盒及電池



內門鑰匙



安裝螺釘

附件名稱	數量	附件名稱	數量	附件名稱	數量	附件名稱	數量
操作指南	1冊	門鎖鑰匙	3條	內門鑰匙	2條	後備匙	2條
		安裝螺釘	2支	外接電源盒	1個	AA電池	4節

注：雙門產品門鎖鑰匙及後備匙各獨立二套。

**首次使用**




**使用外接電源：**  
當您首次使用本產品時，請先接入外接電源使系統通電。



**插入門鎖鑰匙：**  
把門鎖鑰匙按正確的方向插入操作面板的鎖孔內，並確認插到到位。



**輸入初始密碼：**  
先按“#”鍵啓動電子系統；  
輸入出廠密碼：1 2 3 4  
或123456；再按“#”鍵  
確認。

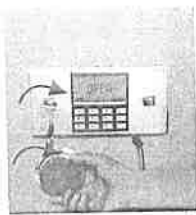

**開啓箱門：**

密碼輸入完畢，按下“#”鍵確認以後，當顯示屏顯示“OPEN”時，請在7秒鐘內，順時針轉動門鎖鑰匙，再順時針轉動門把手（無把手除外），即可打開箱（櫃）門。



**安裝電池：**

打開箱（櫃）門後，拔下外接電源盒取出電池，並將電池逐一安裝于箱（櫃）門後的內置電池盒內。這時電子鎖會發出“D、D、D”聲響表示已通電，否則說明電源尚未接通或電池裝反了。

**密碼設置**

本系列電子產品在出廠前設置了第一組密碼“1234”和第二組密碼“123456”二組原始密碼，為了安全，您在使用前務必予以全部更改！以免他人利用以上原始密碼開啓，造成不必要的損失。

**第一組密碼設置：**

在箱門打開的狀態下，按一下門後的換碼鍵，顯示屏點亮出現光標閃動，此時可輸入您所需要的1-8位數密碼，按“#”鍵確認，屏顯“NO 1 In”，表示第一組密碼設置成功。



**第二組密碼設置：**

按“#”鍵，輸入正確的第二組密碼後，按“#”鍵確認。屏顯示“OPEN”，在7秒鐘內按“\*”鍵屏顯示“----”，屏左上角顯示“請輸入密碼”，此時可輸入你所需要的1-8位數密碼後，按“#”鍵確認，屏顯示“NO 2 In”，表示第二組密碼設置成功。

## 實用功能



**數字隱碼功能：**在使用之前，按“#”鍵啓動系統，接着再按“\*”鍵，此時輸入密碼，屏顯示“0”而不會顯示具體數字。



**密碼錯誤刪除：**在密碼輸入過程中輸入的錯誤號碼，可按“\*”鍵刪除。每按一次“\*”鍵，可刪減一位數字，長按“\*”鍵2秒以上則整行刪除。



**三次錯碼系統鎖定：**當輸入密碼錯誤時屏顯示“Error”。為保證產品的安全性能，連續三次密碼輸入錯誤，內置系統即報警10秒，但在輸入正確密碼可解除原來錯碼報警。



**報警設置與提示：**為提高產品安全性能，產品可設置防盜警報功能。在待機狀態下，輸入“0”鍵，屏顯示“bELLon”表示警報功能啓動，箱（櫃）體處于警戒狀態。當箱（櫃）體受到外力震動時，即發出80分貝報警聲10秒。如果需要遠程聯網報警可另向廠方或經銷點提出購買裝配。

注：每開箱門一次均需要重新設置報警，否則報警功能處于無效狀態。



**欠壓提示功能：**在使用過程中，當屏顯示“LO-BAT”，表示內置電池電量不足，顯示屏的電池狀態顯示空白，提醒您盡快更換電池。建議廠配電池使用二個月後，換新的鹼性五號電池，使用更持久、更方便。



**日期、時間顯示功能：**待機狀態下，按“\*”鍵，進入修改日期、時間狀態，系統會對輸入數字的有效性進行鑒別，超過範圍的無效數字不予確認。各個參數有效範圍如下：

>年：00-99      >時：00-23

>月：01-12      >分：00-59

>日：01-31      >秒：00-59

• 3 •



**開門記錄查詢：**輸入正確密碼開門，當顯示屏顯示“OPEN”還沒有消失，按一下“0”鍵會顯示上一次開門的日期、時間（有2屏），再顯示“PASS1”為第一組密碼開門。“PASS2”為第二組密碼開門紀錄：當顯示屏還沒有消失時，按一下“0”鍵，則顯示出上一次開門記錄，以此類推。系統可保存翻閱最近65條記錄。（按“0”鍵，記錄號+1頁；按“8”鍵，記錄號-1）



## 後備開啓

密碼忘記或電池電壓不足時，請打開後備鎖蓋，用後備開啓（方法如圖）。



後備鎖蓋位置



主鎖與後備匙同時打開

## 安裝固定

為提高產品的安全使用性能，我們建議您將箱（櫃）體與牆面固定。選擇合適的位置，將箱（櫃）體背面靠牆放置；打開門後，按箱（櫃）體背面安裝孔的尺寸在牆面開孔，用膨脹螺絲與混凝土牆面固定。



防盜鎖

外接電源插孔

後備鎖

此為後備鎖蓋，清開蓋子後即後備鎖

## ⚠ 注意事項：

- 1、外接電源僅供初次或內置電池缺電情況下使用，正常通電狀態請勿使用。
- 2、當長期不使用時，請卸下箱內電池。為避免電池腐爛影響正常使用。
- 3、請勿將使用說明書、門鎖鑰匙、內門鑰匙、外接電源盒放置于箱內。
- 4、當密碼更改完畢後，請分別對兩組新設置的密碼進行驗證，確認無誤并牢記後方可開門！門鎖鑰匙與後備匙不可并帶！！！！

• 4 •

# TJ Series User Manual

## Directory

1. Supplied accessories
2. First use
3. Password Settings
4. Functions
5. Spare open
6. Notes

### Supplied accessories:

When you open the product package, be sure to inventory the following accessories are complete!

1. Lock Key
3. Back-up key
3. External power supply box and battery
4. Inner door key
5. Mounting screws

Accessories name	Quantity
Instruction manual	1
Lock Key	3
Inner door key	2
Back-up key	2
Mounting screws	2
External power supply box	1
AA batteries	4

Notes: Each double doors product will have 2 sets of lock key and back-up key

### First use:

1. Use an external power

When the first time you use this product, please access the external power supply to make the system powered.

2. Insert the lock key

Insert the lock key in the right direction to the keyhole of operation panel, and make sure that the key has been inserted completely

### 3. Enter the initial password

Press the "#" key to start the electronic system. Enter the factory password: 1234 Or 123456. Followed by "#" key to confirm

### 4. Open the door

Password entry is completed. Press the "#" key to confirm. When the display shows "OPEN". Turn the door lock key clockwise within 7 seconds. Then clockwise turn the door knob (No door knob excluded). The door can be opened now.

### 5. Installing the battery

Unplug the external power supply box and remove the battery. Install the battery into the built-in battery compartment behind the door. At this time, the electronic lock will issue a "D, D, D" sound indicating power connected. Otherwise the battery is not yet connected or battery installed wrongly.

### **Password Settings:**

This series of electronic products preset the first password "1234" and the second password "123456" two sets of the original password. For safety, You should change both of them before use.

#### The first password settings

Open the door, press the escape key behind the door. When the display cursor flashing, a one to eight-digit password can be entered. Press the "#" key to confirm. The screen displays "NO 1 In", said the success of the first password setting.

#### The second password settings

Press "#" key to enter the correct password, then press the "#" key to confirm. The screen displays "OPEN", press the "\*" within seven seconds, button screen shows " \_\_\_\_ ". The upper left corner of the screen displays "Please enter a password". Now a one to eight-digit password can be entered. Press the "#" key to confirm. The screen displays "NO 2 In", said the success of the second password setting.

### **Functions**

#### 1. Password Hiding

Press the "#" key to start the system. Then press the "\*" key. Enter the password. The screen will display "o" instead of numbers.

2. Delete wrongly typed password

Press "\*" key to delete wrong number. Press and hold two seconds to delete entire row.

3. Alert after 3 times wrong password

Three consecutive password input error. Built-in system will alert for ten seconds, enter the correct password to lift.

4. Alert settings

Press "0" key in the standby mode. The screen displays "bELLon" to state the alert system enabled. The box will issue a 80-decibel alert for ten seconds when the box hit by external shock. If you need remote network alarm. Can purchase with another to the factory or distribution points.

Note: once every open need to reset the alarm, otherwise, the alert function is invalid.

5. Low battery indicator

The screen displays "LO-BAT", Said built-in low battery. battery status on the display this blank. Remind you to replace the batteries as soon as possible

Suggested that replace the original battery after two months with new batteries.

6. Date and time display

Press "\*" key to change the date and time in standby mode.

7. Door record query

Enter the correct password to open the door. When the display shows "OPEN".

Press "0" key will display the last date and time of open the door. (Use "0" and "8" to change page)

### **Spare open**

Forgot your password or battery power shortage

Please open the backup lock cover, use the lock key and back-up key to open.

### **Note**

1. External power supply only for the first time or to do with built-in power supply power shortage situation. Do not use the normal power state

2. Remove the batteries when unused for long period

3. Do not put the instruction manual, Lock key, back-up key and external power supply box into the box