


CHH系列產品說明書

一、認識保險箱/櫃

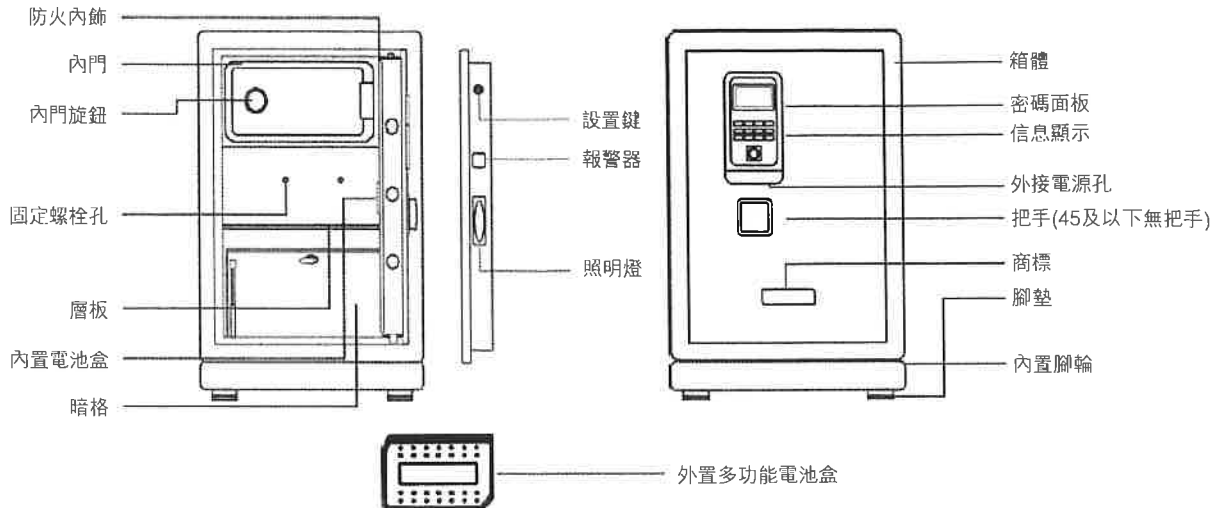

二、操作說明

上電初始化

- 將電池裝入外接電源(注意電池的正負極,切勿裝反)。裝入電池後,將外接電源插頭插入面板外接電源孔,插入大鎖鑰匙。
- 系統第一次上電,密碼初始值為個人碼「1234」。
- 上電後顯示屏自動掃描,掃描後屏顯「GOOD」蜂鳴器演奏聲,音樂然後進入待機狀態。
- 待機狀態下,按下「#」鍵喚醒電子鎖,屏幕顯示「輸入密碼」符號和光標「-」,且光標閃動,顯示屏下半部分顯示電池狀態、設警狀態、密碼顯示狀態,這時輸入1到8位個人密碼,再按「#」鍵確認。(輸入8位密碼後,系統自動確認)
- 如果密碼正確,則屏幕顯示「密碼」及「icon」和「-OPEN-」,電磁鐵吸合5秒,此時,順時針(向右)依次轉動大鎖鑰匙、把手便可打開箱(櫃)門。
- 如果密碼不正確,則屏幕顯示「密碼錯誤」及「icon」和「-ERROR-」2秒後顯示屏再顯示「輸入密碼」符號和光標「-」。
- 如果連續3次輸入密碼有誤,電子鎖就會進入3分鐘的鍵盤鎖定狀態,同時顯示屏顯示「密碼錯誤鎖定」及「icon」,並顯示180秒倒計時,此時無法輸入密碼,當卸下電後或倒計時結束後則自動恢復到待機狀態;同時在鎖定的初始階段,內置喇叭會報警20秒(在報警狀態下顯示屏持續點亮,20秒後顯示屏熄滅,顯示倒計時時間,在倒計時結束前無法進行其它操作)。
- 掉電後,密碼及開門記錄不會丟失,但時間有可能丟失,所有再次上電後,需要重新校對時間。
- 清除功能:在輸入密碼過程中,每按一次「*」鍵,可清除最後輸入的一位數字。
- 隱碼功能:在輸入密碼之前,先按「*」鍵,可切換隱碼功能(單次按下時,隱碼有效「icon」;雙次按下時,隱碼無效「icon」)。
- 隱碼有效時,隨後輸入數字不會顯示,而以「0」代替。輸入未完成,如果10秒內未按鍵,則退出輸入狀態,回到待機狀態。每次輸入密碼正確的開門記錄將被保存。

個人密碼的更改

- 待機狀態下,按門內設置鍵,顯示屏顯示「輸入密碼」符號和「-」光標,且光標閃動。
- 此時可輸入1-8位新的個人密碼,再按「#」鍵確認(輸入8位密碼,系統自動確認)。屏幕上顯「in」,表示密碼修改成功。隨後屏幕再顯示一次新密碼1秒鐘,回到待機狀態。
- 清除功能:再輸入新密碼過程中,每按一次「*」鍵,可清除最有輸入的一位數字。
- 修改未完成,如果10秒內未按鍵,則退出修改狀態(密碼還是原來的舊密碼),回到待機狀態。

查詢開門記錄

- 在待機狀態下,按一下「*」鍵,顯示屏點亮,顯示當前日期和時間,再按「1」鍵,則顯示屏顯示最近一條開鎖記錄,需翻頁,則按「*」鍵為第二條記錄,按「#」鍵為再後一條記錄,依此類推(可存儲14條記錄)。

修改系統日期

- 在待機狀態下,按一下「*」鍵,顯示屏點亮,顯示當前的日期和時間,再按「0」鍵,此時整個屏數字在跳動,此時依次輸入年、月、日、時、分後系統自動儲存。

震動報警功能


- 待機狀態下,按一下「*」鍵,顯示屏點亮,顯示當前的日期和時間,再按「2」鍵,屏幕顯示警戒標誌「icon」及「ALRrt on」並進入警戒狀態。
- 警戒狀態有效時,保險箱受到振動就會報警20秒,屏幕顯示報警喇叭「icon」和光標「-」。
- 此時,輸入正確密碼,屏幕顯示「密碼」及「icon」和「-OPEN-」,停止報警,並解除警戒狀態。
- 系統上電後警戒的缺省狀態為關閉,警戒狀態有效時,只要執行一次正確的開門動作,就會關閉警戒狀態,標誌「icon」表示警戒狀態關閉,標誌「icon」表示警戒狀態開啟。

應急開啟

- 將電池裝入外接電源(注意電池及外接電源的正負極)切勿裝反。
- 裝入電池後,將外接電源插頭插入面板外接電源孔,在附件盒中取出內六角扳手,用扳手把商標處螺絲取下,插入應急鑰匙向右旋轉至底,便可打開。

CHH Series User Manual

Structure:

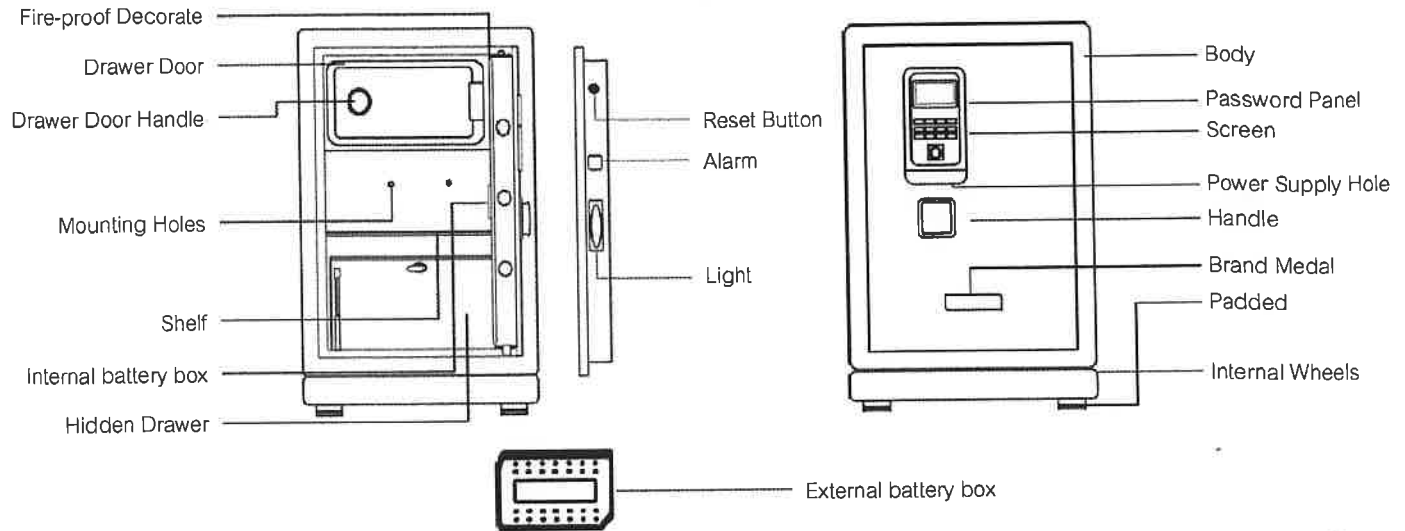

Open the safe for the first time:

- Insert the battery into the external battery box, then plug the external battery box in the power hole.
- The default password is "1234".
- When batteries are inserted correctly, screen will scan automatically. Then, 'GOOD' will be displayed and music will be heard. The safe is now in the standby mode.
- During standby mode, press '#' to start the system. When the screen displays "輸入密碼" (enter password) and "-----" flashing, a personal password of 1 to 8 digits can be set. Press '#' to confirm.
- If the password is correct, screen will display "密碼" and "icon" and "OPEN", turn the master key clockwise in 5 seconds. Now you can turn the handle open or lock the safe.
- If the password is not correct, "密碼錯誤" and "icon" and "-ERROR-" will be displayed. After 2 seconds screen will show '-----' again. Type the password again.
- If the password is wrong for three times, screen will displayed "密碼錯誤鎖定" and "icon". 180 seconds countdown start, now the safe is totally lock, alarm will ring for 20 seconds.
- To clear the number inputted, press '*' to clear the last digit typed.
- To hide the password: Press "*" first. Before inputting the password, press "*" . (To undo, press "*" two times). Only '0' will be shown instead of the actual password.

Changing your personal password:

- During standby mode, press the reset button behind the door, screen will display "輸入密碼" and "-----" flashing.
- Input a new password of 1 to 8 digits. Press '#' to confirm. (Password will be automatically confirmed if 8 digits are typed). When the screen displays "in", the password is changed successfully.
- To clear the number inputted, press '*' to clear the last digit typed.
- During the period, if no number is typed in 10 seconds, the safe will return to standby mode and the old password will be kept.

Checking door opening record:

- During standby mode, press "*", screen display date and time, press "1" display most recent record, press "*" display the next record, press "#" display the last record. (The system can keep a maximum 14 records).

Changing system date:

- During standby mode, press "*", screen display date and time, press "0" and enter "year" - "month" - "day" - "hour" - "minute"

Alarm Function:

- During standby mode, press "*", screen display date and time, press "2", screen will display "icon" and "ALRt on", system is in the alert mode.
- In the alert mode, the safe will alarm when it is shaken. Screen will display "icon" and "-----". To cancel the alarm, enter the correct password until the screen display "-OPEN-".

Emergency Open:

- Insert the battery into the external battery box, then plug the external battery box in the power supply hole. Use Allen Key to open the brand medals, insert the emergency key into the small hole, rotate clockwise, safe can be opened.