



## 3C 認證高級電子保險箱(TAA 系列)

### 首次開機 (出廠密碼 1234)

先按 “#” 屏幕顯示 “-”，按 “1234”，再按 “#” 確認密碼打開，顯示 OPEN，最後轉動鎖匙或旋轉把手拉開保險箱。

### 更改密碼

當成功輸入正確密碼後，顯示屏幕會先出現 “OPEN” 字樣，約五秒後會轉成 “OPEN-C”，在 “OPEN-C” 消失前按 0 鍵，之後輸入最多 8 位數字密碼，最後按 “#” 鍵，顯示屏幕會出現 “in”，更改完成。

(請先再試一次密碼是否正確才把保險箱門門上)

### 記錄查詢

成功輸入正確密碼後，顯示屏幕會先出現 “OPEN” 字樣，約五秒後會轉成 “OPEN-C”，在 “OPEN-C” 消失前按 5 鍵，進入記錄查詢。2 鍵與 9 鍵分別為上下鍵，當選定記錄後，再按 “6” 鍵就可查詢所對應記錄的具體時間。最多可記錄 60 條最近開機紀錄。

### 時間設置

在背光燈熄滅時，按一下 “\*” 鍵後進入時間更改設定，依據年，月，日和時間輸入，星期系統會自動設置。

### 震動警報

成功輸入正確密碼後，顯示屏幕會先出現 “OPEN” 字樣，約五秒後會轉成 “OPEN-C”，在 “OPEN-C” 消失前按 9 鍵，三秒後震動警報開啟。


(建議貴客在出遠門或長時間不在家才開啟警報)

### 還完出廠設定

在背光燈熄滅時，按下 “初始化按鈕” (電池盒右方) (不要鬆手)，約兩秒後，密碼初始化，成功時會有提示音發出，密碼會變回出廠碼 1234，還完出廠設定完成。

### 內門密碼 (出廠密碼 “000”)

更換密碼時需要先撥到正確密碼 (圖 1)，把 A 轉到 B (圖 2)，再在密碼盤上撥到你想要的密碼，完成後再撥回 A 上，密碼更換成功。

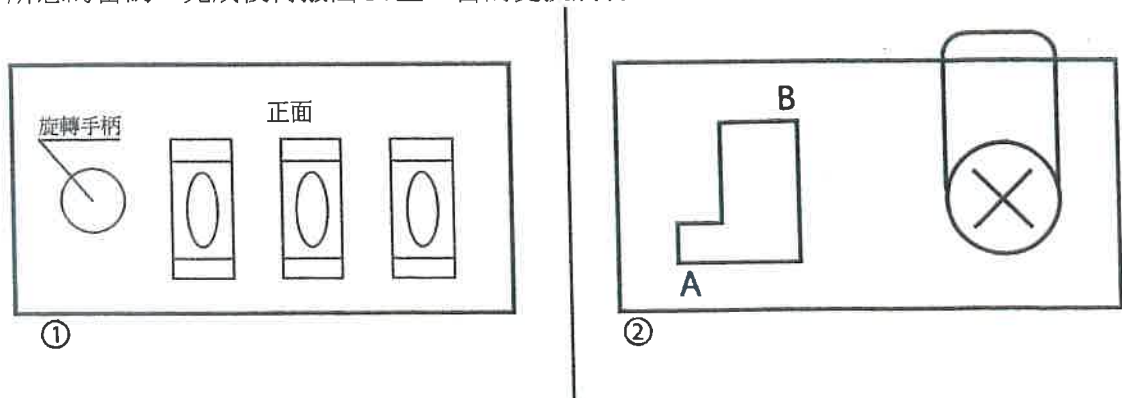

請妥善保管你的後備電源盒和後備鎖匙，不能放進保險箱內。電池應當最少每半年更換一次，防止電池結晶出水引致電腦板短路。

本保險箱有兩年免費保養，但不包括人為問題，電池結晶出水引致電腦板短路等等。

# TAA Series User Manual

## Using for the First Time

First, Press “#” to view “-”, input default password “1234” then press “#”, the screen display “OPEN”, now turn the key or handle to open the door.

## Change Password

When entered the correct password, screen will display “OPEN”, after 5 seconds will change to “OPEN-C”, press number key “0” before the “OPEN-C” disappear, then enter the new password(maximum 8 digits), press “#” to apply the new password. (Please do not close the door before you make sure the new password is correct)

## Record Search

When entered the correct password, screen will display “OPEN”, after 5 seconds will change to “OPEN-C”, press number key “5” enter to the Record Search Mode before the “OPEN-C” disappear. Number key “2” and “9” is the “Up Arrow” and “Down Arrow” key, press number key “6” to view the record detail. (The system can record up to 60 records)

## Time Setting

After the LCD screen light out, press “\*” enter to the Time Setting Mode.

## Vibration Alarm Setting

When entered the correct password, screen will display “OPEN”, after 5 seconds will change to “OPEN-C”, press number key “9” to turn on/off the Vibration Alarm.

## Factory Reset

After the LCD screen light out, press and hold the reset key( at the battery box right side) about 2 seconds, then you will hear the “bit” sound, password changed to default setting.

## Setting Inside Door's Password

First enter the correct password, then turn the handle bar, now change the password combination, then turn back the handle bar to apply the new password setting.